


Operating Instructions

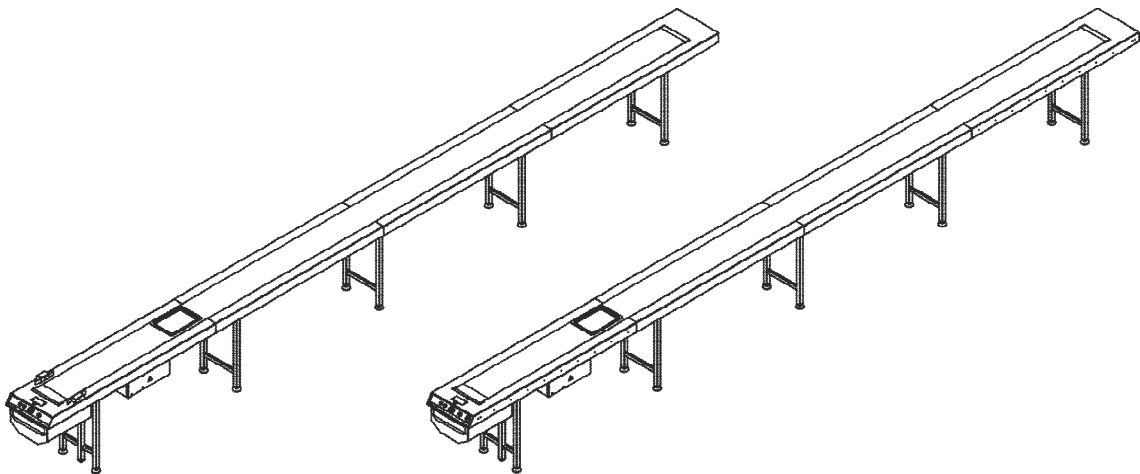

Belt Conveyor System SGR | SPV

1 Introduction

1.1 Appliance Information

| | |
|---------------------|---|
| Appliance name | Belt Conveyor System |
| Appliance type/s | SGR SPV |
| Year of manufacture | 2014 |
| Manufacturer | HUPFER® Metallwerke GmbH & Co KG Dieselstraße 20 48653 Coesfeld Germany Postfach 1463 48634 Coesfeld, Germany ☎ +49 2541 80 50 📠 +49 2541 805 111 www.hupfer.de info@hupfer.de |

Read and understand these operating instructions to ensure safe operation and avoid any damage! Ensure that operating staff have been briefed regarding sources of danger and possible incorrect handling.

Subject to modifications

The products covered by these operating instructions have been developed while taking into account market requirements and the latest technology. HUPFER® reserves the right to modify the products and related technical documentation in the interests of technical progress. The data and weights as well as the description of performance and functions assured in the order confirmation as binding are always decisive.

This manual is a translation of the original edition.

Manual edition
4330053_A7

1.2 Table of Contents

| | | |
|----------|---|-----------|
| 1 | Introduction | 2 |
| 1.1 | Appliance Information | 2 |
| 1.2 | Table of Contents | 3 |
| 1.3 | List of Abbreviations | 5 |
| 1.4 | Definitions of Terms | 6 |
| 1.5 | Orientation of the Appliance | 7 |
| 1.6 | Notes on Using the Manual | 8 |
| 1.6.1 | Notes on the Manual Structure | 8 |
| 1.6.2 | Notes and their Representation used in all Sections | 8 |
| 2 | Safety Instructions | 9 |
| 2.1 | Introduction | 9 |
| 2.2 | Symbols Used | 9 |
| 2.3 | Safety Instructions for Appliance Safety | 10 |
| 2.3.1 | Special Safety Instructions for Mobile Conveyor Systems | 10 |
| 2.4 | Position of the Emergency Stop Button | 11 |
| 2.5 | Safety Instructions for Transport and Installation | 11 |
| 2.6 | Safety Instructions for Use and Operation | 11 |
| 2.7 | Safety Instructions for Maintenance and Care | 12 |
| 2.8 | Safety Instructions Regarding Fault Repair | 12 |
| 2.9 | Notes on Specific Hazards | 13 |
| 3 | Description and Technical Data | 14 |
| 3.1 | Performance description | 14 |
| 3.2 | Proper Use | 14 |
| 3.3 | Improper Use | 14 |
| 3.4 | Appliance Description | 15 |
| 3.4.1 | View of the crockery return belt system | 15 |
| 3.4.2 | View of the food distribution belt system | 16 |
| 3.4.3 | Standard Equipment | 16 |
| 3.4.4 | Equipment and Optional Accessories | 16 |
| 3.5 | Technical data | 18 |
| 3.6 | Rating Plate | 19 |
| 4 | Transport, Installation, Initial Operation and Taking out of Service | 20 |
| 4.1 | Transport | 20 |
| 4.2 | Assembly | 20 |
| 4.2.1 | Assembly of segments | 21 |
| 4.2.2 | Pulling up the belt | 22 |
| 4.2.3 | Stretching the belt | 22 |
| 4.2.4 | Adjusting the belt | 23 |
| 4.3 | Commissioning | 24 |
| 4.3.1 | Connecting the conveyor system | 24 |


 

| | | |
|----------|---|-----------|
| 4.3.2 | Measures for Putting the Appliance into Operation | 25 |
| 4.4 | Decommissioning, Storage and Recycling | 25 |
| 5 | Operation | 27 |
| 5.1 | Arrangement and Function of the Controls | 27 |
| 5.2 | Operation | 28 |
| 5.3 | Measures at the End of Use | 28 |
| 6 | Troubleshooting and Repair | 29 |
| 6.1 | Safety Measures | 29 |
| 6.2 | Instructions regarding Fault Repair | 29 |
| 6.3 | Fault and Action Table | 29 |
| 7 | Care and Maintenance | 31 |
| 7.1 | Safety Measures | 31 |
| 7.2 | Hygiene Measures | 31 |
| 7.3 | Notes on Care and Maintenance Measures | 31 |
| 7.3.1 | Table of care measures | 32 |
| 7.3.2 | Maintenance table | 32 |
| 7.4 | Special Care Instructions | 33 |
| 8 | Spare Parts and Accessories | 34 |
| 8.1 | Introduction | 34 |
| 8.2 | Spare Parts and Accessories List | 34 |
| 9 | Annex | 35 |
| 9.1 | Monthly Maintenance Checklist | 35 |
| 9.2 | Safety Instruction Protocol | 36 |
| 9.3 | EC Declaration of Conformity | 37 |

1.3 List of Abbreviations

| Abbreviation | Definition | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--------------|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|---|---|--|---|---|---|---|---|--|---|---|---|--|--|--|---|--|--|--|---|--|
| CE | Communauté Européene European Community | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DGUV | German Statutory Accident Insurance (<i>Deutsche Gesetzliche Unfallversicherung e.V.</i>) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DIN | German Institute for Standardisation, technical regulations and technical specifications | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E/V | Spare or wearing part (<i>Ersatz- bzw. Verschleißteil</i>) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| EC | European Community European Community | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| EN | European Standard (<i>Europäische Norm</i>) Harmonised standard for the EU market | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| HACCP | Hazard Analysis and Critical Control Points Hazard analysis of critical control points | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| IP | <p>International Protection. The abbreviation IP and a further two-digit index specify the protection class of a housing.</p> <p>The first digit: Protection against ingress of solid foreign objects The second digit: Protection against ingress of water</p> <table border="1"> <tbody> <tr> <td>0</td> <td>No protection against contact, no protection against ingress of solid foreign bodies</td> <td>0</td> <td>No protection against ingress of water</td> </tr> <tr> <td>1</td> <td>Protection against contact with any large surface of the body such as the hand, protection against ingress of foreign objects $\varnothing > 1.97''$ (50 mm)</td> <td>1</td> <td>Protection against dripping water (vertically falling drops)</td> </tr> <tr> <td>2</td> <td>Protection against contact with the fingers, protection against ingress of foreign objects $\varnothing > 0.5''$ (12 mm)</td> <td>2</td> <td>Protection against dripping water (at any angle up to 15° from the vertical)</td> </tr> <tr> <td>3</td> <td>Protection against contact with tools, wires or similar objects of $\varnothing > 0.1''$ (2.5 mm), protection against foreign objects $\varnothing > 0.1''$ (2.5 mm)</td> <td>3</td> <td>Protection against water drips at any angle up to 60° from the vertical</td> </tr> <tr> <td>4</td> <td>Protection against contact with tools, wires or similar objects of $\varnothing > 0.04''$ (1 mm), protection against foreign objects $\varnothing > 0.04''$ (1 mm)</td> <td>4</td> <td>Protection against water splashing from any direction</td> </tr> <tr> <td>5</td> <td>Protection against contact, protection against dust deposits inside</td> <td>5</td> <td>Protection against water jets (projected by a nozzle) at any angle</td> </tr> <tr> <td>6</td> <td>Complete protection against contact, protection against ingress of dust</td> <td>6</td> <td>Protection against rough sea or strong water jets (flood protection)</td> </tr> <tr> <td></td> <td></td> <td>7</td> <td>Protection against ingress of water during temporary immersion</td> </tr> <tr> <td></td> <td></td> <td>8</td> <td>Protection against pressurised water during continuous immersion</td> </tr> </tbody> </table> | 0 | No protection against contact, no protection against ingress of solid foreign bodies | 0 | No protection against ingress of water | 1 | Protection against contact with any large surface of the body such as the hand, protection against ingress of foreign objects $\varnothing > 1.97''$ (50 mm) | 1 | Protection against dripping water (vertically falling drops) | 2 | Protection against contact with the fingers, protection against ingress of foreign objects $\varnothing > 0.5''$ (12 mm) | 2 | Protection against dripping water (at any angle up to 15° from the vertical) | 3 | Protection against contact with tools, wires or similar objects of $\varnothing > 0.1''$ (2.5 mm), protection against foreign objects $\varnothing > 0.1''$ (2.5 mm) | 3 | Protection against water drips at any angle up to 60° from the vertical | 4 | Protection against contact with tools, wires or similar objects of $\varnothing > 0.04''$ (1 mm), protection against foreign objects $\varnothing > 0.04''$ (1 mm) | 4 | Protection against water splashing from any direction | 5 | Protection against contact, protection against dust deposits inside | 5 | Protection against water jets (projected by a nozzle) at any angle | 6 | Complete protection against contact, protection against ingress of dust | 6 | Protection against rough sea or strong water jets (flood protection) | | | 7 | Protection against ingress of water during temporary immersion | | | 8 | Protection against pressurised water during continuous immersion |
| 0 | No protection against contact, no protection against ingress of solid foreign bodies | 0 | No protection against ingress of water | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Protection against contact with any large surface of the body such as the hand, protection against ingress of foreign objects $\varnothing > 1.97''$ (50 mm) | 1 | Protection against dripping water (vertically falling drops) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | Protection against contact with the fingers, protection against ingress of foreign objects $\varnothing > 0.5''$ (12 mm) | 2 | Protection against dripping water (at any angle up to 15° from the vertical) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | Protection against contact with tools, wires or similar objects of $\varnothing > 0.1''$ (2.5 mm), protection against foreign objects $\varnothing > 0.1''$ (2.5 mm) | 3 | Protection against water drips at any angle up to 60° from the vertical | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | Protection against contact with tools, wires or similar objects of $\varnothing > 0.04''$ (1 mm), protection against foreign objects $\varnothing > 0.04''$ (1 mm) | 4 | Protection against water splashing from any direction | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | Protection against contact, protection against dust deposits inside | 5 | Protection against water jets (projected by a nozzle) at any angle | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | Complete protection against contact, protection against ingress of dust | 6 | Protection against rough sea or strong water jets (flood protection) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 7 | Protection against ingress of water during temporary immersion | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 8 | Protection against pressurised water during continuous immersion | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| LED | Light Emitting Diode Light diode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| LMHV | Regulation on the hygiene of foodstuffs | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| RCD | Residual Current Device Residual current device (RCD) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| STB | Safety temperature limiter | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| VDE | Association of Electrical Engineering, Electronics and Information Technology (<i>Verband der Elektrotechnik, Elektronik und Informationstechnik e.V.</i>) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

1.4 Definitions of Terms

| Term | Definition |
|---------------------------|--|
| Authorised specialist | An authorised specialist is a specialist that has been trained by the manufacturer, an authorised service dealer or a company assigned by the manufacturer. |
| Check, inspect | Compare with certain conditions and/or characteristics such as damage, leaks, filling levels and heat. |
| cleaning system-resistant | <p>The suitability of the appliance for cleaning in an automated cleaning system is limited. It is possible to achieve a flawless, reproducible cleaning and drying result, but it cannot be guaranteed.</p> <p>The exterior and interior housing are produced to standard specifications. Water ingressing hollow spaces resulting from the design of the appliance can run off without hindrance. Water collection in hollow spaces is avoided. Installed electrical components and electrical wiring are protected by appropriate sealing (for example, labyrinth edges, sealing profiles, cable channels) against any form of penetration by water. Protection class IPX6 (powerful pressurised water) to DIN EN 60529 (VDE 0470) is guaranteed. It is possible that water remains and is carried over following the drying process.</p> |
| Convection | Physical properties or mass transfer (e.g. heat or cold) through currents in gases and liquids. |
| Cook&Chill Kitchens | "Cook and Chill": Kitchens where warm food is chilled as quickly as possible after being cooked. |
| Cook&Serve Kitchens | "Cook and Serve": Kitchens where warm food is served immediately after being cooked or kept warm until it is consumed. |
| Corrosion | The chemical reaction of a metallic material with its surroundings, e.g. rust. |
| Cover | A bell-shaped cover for keeping food warm on plates and dishes. |
| Element formation | Also: contact corrosion. Occurs when different noble metals are in close contact with each other. This happens when a corrosive medium is between both metals, such as water or even normal air moisture. |
| EM field | Electrical, magnetic or electromagnetic field that is defined by its field intensity and phase formation. |
| EN tray | A European standard tray is a tray in a standard size. EN 1/1 corresponds to 20.9x14.6" (530x370 mm), EN 1/2 corresponds to 14.6x10.4" (370x265 mm). |
| Gastronorm | Gastronorm is a measurement system used worldwide in places such as food processing plants or large-scale kitchens. The use of standardised sizes makes it possible to exchange food pans. The basic size of the Gastronorm (GN) 1/1 is 20.9 x 12.8" (530 x 325 mm). Items are available in different depths. |
| GN tray | A Gastronorm standard tray is a standard-size tray. GN 1/1 corresponds to 20.9x12.8" (530x325 mm), GN 1/2 corresponds to 12.8x10.4" (325x265 mm). |
| H1 | Hygienic standard (NSF/USDA) for lubricants that are suitable for incidental and technically unavoidable contact with foodstuffs. |
| HACCP | HACCP is a preventive system that is designed to ensure the safety of foods and consumers. |
| Instructed person | An instructed person is a person who has been instructed on the possible risks resulting from improper behaviour when carrying out an assigned task and regarding the necessary protective equipment and protective measures, and who has been trained for this task, if necessary. |
| Lift | A movement, for example a vertical movement of the guide basket from bottom to top. |
| LMHV | German Regulations on the Hygiene of Foodstuffs Regulations regarding hygiene requirements for producing, handling and placing food on the market |
| Machine safety | The term machine safety refers to all the measures used to avert injury to persons. The basis for machine safety is directives and laws for protecting users of technical devices and systems valid nationally and across the EC. |
| Passive layer | A non-metallic protective layer on a metallic material that prevents or slows down material corrosion. |

| Term | Definition |
|---------------------------------------|--|
| Porcelain Standard | Porcelain Standard is a measurement system for porcelain plates devised by HUPFER®. The basic size of Porcelain Standard (PN) 1/1 is 8.7 x 6.3" (220x160 mm) (1/2 PN conforms to 4.3x6.3" (110x160 mm), 1/4 PN conforms to 6.3x3.1" (160x80 mm)). The fitting lids have the following dimensions: 1/1 PN 9x6.6" (228x168mm), 1/2 PN 4.4x6.3" (111x161mm), 1/4 PN 4.4x3.2" (111x81mm). |
| Protection class | <p>0 -</p> <p>I </p> <p>II </p> <p>III </p> |
| Qualified person, qualified personnel | Qualified personnel are persons who due to their professional training, experience, instruction and their knowledge of relevant standards, guidelines, accident prevention regulations and operating conditions have been authorised by a person responsible for system safety to carry out required activities and can recognise and prevent any potential hazards (definition of specialists according to IEC 364). |
| Schuko® | The abbreviation of the German term "Protective contact" indicates a system of domestic plugs and sockets equipped with protective earthed contacts used in most of Europe. |
| Specialist | A specialist is a person who can assess work assigned and can recognise possible hazards themselves based on their professional training, skills, experience and knowledge of the respective guidelines. |
| suitable for washing devices | The appliance is suitable for cleaning in an automated cleaning system without restrictions. Following agreement with the manufacturer the cleaning system must achieve a hygienic, constant cleaning and drying result, which is to be approved by a third party (client). The exterior and interior housing are manufactured to a standard guaranteeing hermetic sealing. It is not possible for water jets to ingress into hollow spaces in the appliance. Installed electrical components and electrical wiring are protected by appropriate sealing against any form of penetration by water. Protection class IPX6 (powerful pressurised water) to DIN EN 60529 (VDE 0470) is guaranteed. No water remains or is carried over following the drying process. |
| Verify, test | Compare with certain values such as weight, torque, content or temperature. |
| VESKA standard | Trays as per the VESKA standard are items used for distributing food in hospitals, principally in Switzerland; they measure 20.9x14.8" (530x375 mm) |

1.5 Orientation of the Appliance

The front

"Front" refers to the side where members of the staff place trays (beginning of the belt).

The rear

"Rear" refers to the side where trays are taken from the belt. The controls of the conveyor system are fitted here (end of the belt).

The right

"Right" refers to the right side of the conveyor system in relation to the conveying direction.

The left

"Left" refers to the left side of the conveyor system in relation to the conveying direction.




1.6 Notes on Using the Manual

1.6.1 Notes on the Manual Structure

This manual is divided into function- and task-focused sections.

1.6.2 Notes and their Representation used in all Sections

The warnings and notes are separated from the other text and particularly marked by corresponding icons. The icon cannot, however, replace the text of the safety instructions. Therefore, always read thoroughly the full text of the safety instructions. The warnings and notes are separated in these operating instructions as follows and categorised by the following danger levels by means of various symbols.

| | |
|---|---|
| DANGER | Brief description of hazard |
|  | <p>There is an imminent threat to life and physical well-being for the user and / or third parties if instructions are not followed precisely or the circumstances described are not taken into account.</p> <p>The type of hazard is indicated by a symbol and explained in the accompanying text in more detail. The general hazard symbol is used in this example.</p> |
| WARNING | Brief description of hazard |
|  | <p>There is an indirect threat to life and physical well-being for the user and / or third parties if the instructions are not followed precisely or the circumstances described are not taken into account.</p> <p>The type of hazard is indicated by a symbol and explained in the accompanying text in more detail. The general hazard symbol is used in this example.</p> |
| CAUTION | Brief description of hazard |
|  | <p>There is a potential risk of injury or property damage if the instructions are not followed precisely or the circumstances described are not taken into account.</p> <p>The type of hazard is indicated by a general symbol and explained in the accompanying text in more detail. The general hazard symbol is used in this example.</p> |
| NOTE | Brief description of additional information |
| | <p>Attention is pointed to special conditions or additional important information on the topic concerned.</p> |
| INFO | Short title |
| | <p>It contains additional information on work ease or recommendations on the topic concerned.</p> |

2 Safety Instructions

2.1 Introduction

The Safety Instructions section describes the risks associated with the appliance in terms of product liability (according to the EU Machinery Directive).










The safety instructions are meant to warn of hazards and help to avoid damage to persons, the environment and property. Please make sure that you have read and understood all the safety instructions given in this section.

The valid national and international Safety at Work Regulations must be complied with. The manufacturer is responsible for the valid regulations he/she has to provide. He/she must acquaint himself/herself and the operator with the new regulations.

2.2 Symbols Used

Symbols are used in these operating instructions to indicate the dangers that may occur while operating or cleaning the appliance. In both cases, the symbol provides information on the type and circumstances of hazards.

The following symbols may be used:

| | |
|---|---|
|  | General hazard area |
|  | Hazardous electrical voltage |
|  | Risk of hand injuries caused by belt drive |
|  | Risk of hand injuries |
|  | Risk of crushing |
|  | Hazard caused by hot surfaces |
|  | Switching prohibited |
|  | Wear hand protection |
|  | Read and observe the operating instructions |

2.3 Safety Instructions for Appliance Safety

The appliance is operated safely if it is used correctly and carefully. Negligent handling of the appliance can lead to a threat to life and physical well-being for the user and / or third parties as well as hazards for the appliance itself and the operator's other property.

The following points are to be observed to ensure the appliance safety:

- The appliance may only be operated as intended, when it is in perfect condition with regards to technical standards, with awareness of safety and hazards and in accordance with the operating instructions.
- All operating and actuating elements must be in a perfect and fail-safe condition with regards to technical standards.
- Only operate the conveyor system when all safety devices or emergency stop devices are available and function properly. Easy access to the emergency stop button needs to be ensured. Never remove safety devices.
- Comply with the safety instructions and hazard warnings on the conveyor system and make sure they are easy-to-read.
- Before putting the appliance into operation, the appliance must be checked for external visible damage and defects. In case of damage, immediately inform the competent bodies and switch off the conveyor system.
- Modifications or retrofits to the equipment are only permitted after consultation with the manufacturer and upon receipt of their consent in writing.
- Stationary conveyor systems are designed for permanent installation.

2.3.1 Special Safety Instructions for Mobile Conveyor Systems

- The conveyor systems are designed for transport by hand only. It is not permitted to use a machine of any type to move the appliance.
- Conveyor systems can start moving on their own and randomly if the total locks are not applied.
- Switch off the conveyor system and pull out the mains plug before transporting it.
- Never pull the mains plug out of the socket by the wire.
- Before moving the conveyor system, release the locking brakes. Moving the appliance with the applied locking brakes can damage the chassis!
- Do not move the appliance over inclined surfaces or stairs. When approaching walls and moving round obstacles always pay attention to persons in the way.
- When transporting the conveyor system, do not move it faster than a walking pace. It is difficult to brake and steer heavily laden appliances. If necessary, ask for assistance when transporting the appliance.
- When moving the conveyor system, make sure that the appliance will not tip over due to outside influences or inattention. If, nevertheless, it tips over never try to catch the conveyor system.
- Secure the conveyor system against rolling away by applying the total locks before putting it into operation.
- Do not place the appliance on sloping floors. Before placing the appliance in position make sure that the floors are level and even and the conveyor system is level.
- A maximum belt length of 7 m may not be exceeded.

2.4 Position of the Emergency Stop Button

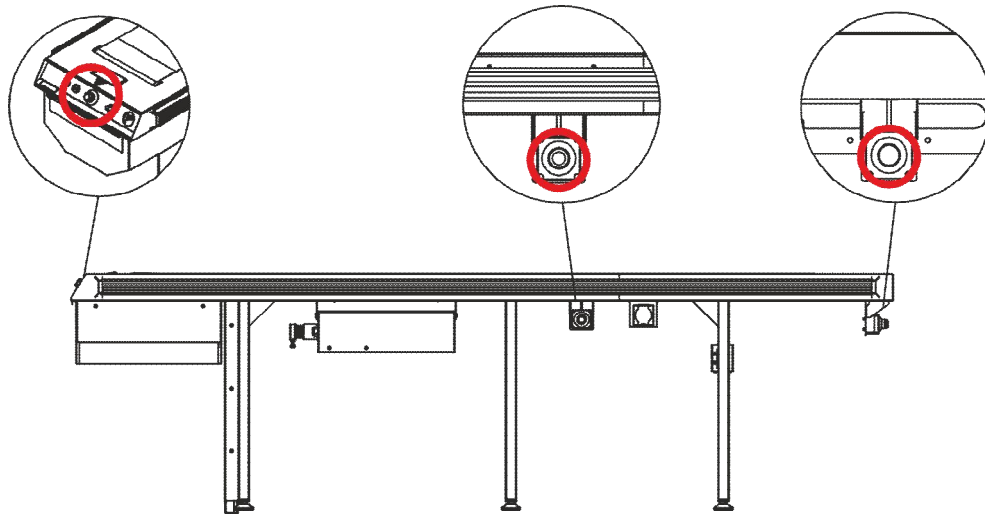


Figure 1 Position of the Emergency Stop button (option)

2.5 Safety Instructions for Transport and Installation

The following aspects are to be taken into account when transporting the conveyor system:

- When loading, use only hoists and load lifting devices approved for appliances 1,5 times heavier than the appliance to be lifted.
- Only use transport vehicles that are approved to carry the weight of the conveyor system.
- Use transport vehicles that are approved for the weight of the conveyor system.
- Parts that have possibly been dismantled for transport must be fitted back and fastened before putting the appliance into operation again.
- Even in case of a minor relocation switch off the conveyor system at the mains or disconnect it from any power supply.
- In accordance with the legal regulations the buyer bears the risk of transportation. Ask the deliverer to write down visible damages in the waybill.
- Do not put a defective appliance into operation under any circumstances and inform the supplier immediately in such a case.

2.6 Safety Instructions for Use and Operation

The following points shall be observed when using and operating the appliance:

- Staff is to be instructed in the use and operation of the conveyor system before it is started.
- Loose items of clothing (e.g. scarf or tie) and jewellery are not to be worn when working on the conveyor system. Otherwise there is the risk of being pulling in by rotating machinery parts.
- Unimpeded access to the Emergency Stop buttons must be on hand at all times.
- Make sure that nobody is exposed to a hazard as a result of the activation of the conveyor system before switching on the appliance.

2.7 Safety Instructions for Maintenance and Care

The following points shall be observed when carrying out any maintenance operations:

- Take the conveyor system out of operation, switch it off and secure against unauthorised reactivation before performing maintenance or troubleshooting operations. The appliance must be switched off at the mains and secured against reactivation when working on the electrical system.
- Only persons with qualifications and knowledge of electrical engineering may perform maintenance and repair work on electrical devices.
- If maintenance or repair work at live parts is required, a second person must be involved at all times.
- The maintenance and care intervals specified in the operating instructions must be observed.
- Before proceeding with maintenance and repair work close the maintenance area and the access to the working area for unauthorised persons. If necessary, place an indication sign that draws attention to the running maintenance and repair work.
- Observe the valid product safety regulations for the product when handling oils, greases and other chemical substances.
- Lubricants must be compatible with foodstuffs such as edible oil.
- Carry out all the checks and inspections of the appliance on a regular basis. Remove immediately deficiencies, such as loose screw connections or melted cables.
- Fit the dismantled safety devices back to the appliance and check them for proper functionality after completing maintenance and repair work.
- Cleaning instructions must be strictly observed for reasons of hygiene.
- Never clean the running conveyor system.
- Do not clean the conveyor system with steam-jet or high-pressure cleaners.
- Take the conveyor system out of operation and switch it off at the mains in any area where steam-jet or high-pressure cleaners are to be used.

2.8 Safety Instructions Regarding Fault Repair

The following aspects must be taken into account when carrying out any troubleshooting work:

- The local Accident Prevention Regulations in force must be observed.
- Take the conveyor system out of operation, switch it off and secure against unauthorised reactivation before performing maintenance or troubleshooting operations. The appliance must be switched off at the mains and secured against reactivation when working on the electrical system.
- Observe the valid product safety regulations for the product when handling oils, greases and other chemical substances.
- Wear suitable protective clothing when carrying out any repair work.
- Only authorised specialists may repair any faults or malfunctions.
- Tighten the loosened screw connections and fit the safety devices back to the appliance if dismantled, and test their proper functioning after completing the repair work.
- Defective components may be replaced with original parts only.

2.9 Notes on Specific Hazards

Electric power

- All work on the electrical installations may only be carried out by a qualified electrician or by authorised specialists under the supervision and monitoring of a qualified electrician according to the applicable electro-technical regulations.
- The appliances on which inspection, maintenance and fault repairs are performed must be disconnected from the power supply and secured against reactivation when power is not required for such work. This may only be carried out by a qualified electrician.

3 Description and Technical Data

3.1 Performance description

The conveyor system is designed to transport trays loaded with crockery. The conveyor system conveys the trays to the following work step. Depending on the type used, the conveyor system conveys either clean trays loaded with portioned meals or trays containing dirty crockery.

The crockery return belt system (SGR) is used mainly to hold up Gastronorm and Euronorm trays and to clear away continuously and quickly trays with dirty crockery, cutlery, glasses and napkins. Members of the operating staff clear away the trays loaded with dirty crockery items that are conveyed to the washing area.

The food distribution belt system (SPV) is used mainly to hold up Gastronorm and Euronorm trays and to load continuously and quickly trays with portioned meals, crockery, cutlery, glasses and napkins. Serving devices and operating staff that stays at the conveyor system load trays and serve portions on crockery items. To serve meals up to the guest area, other peripheral devices at the end of the belt can be used.

Thanks to the modular design and the wide number of standard components, the conveyor system can be perfectly suited to any premises. Peripheral appliances and optional accessories can be added in order to substantially streamline operations. Components suitable for use with foodstuffs and easy-to-clean construction ensure the highest hygienic standard.

3.2 Proper Use

The conveyor system is mainly designed to hold up Gastronorm and Euronorm trays. Any other use is not permitted.

The crockery return belt system (SGR) is used to hold up and to convey away trays with dirty crockery, cutlery, glasses and napkins.

The food distribution belt system (SPV) is used to hold up and to convey away trays with portioned meals, clean crockery, cutlery, glasses and napkins.

Proper use includes observing specified procedures, compliance with the technical specifications and use of supplied or optional original accessories.

Any other use of the appliance is considered as unintended use.

3.3 Improper Use

Any other use, especially loading the conveyor system with the other loads than those specified, is not permitted.

In particular, transport of materials hazardous to foodstuffs is considered as unintended use.

Do not transport heavy and sharp-edged items on the conveyor system. It is not permitted to convey stacked crockery items.

Do not allow people to sit or store objects on the conveyor system. Transport of people is not permitted.

It is not permitted to modify or retrofit the conveyor system. Such modifications can pose safety hazard and are considered as unintended.

The manufacturer and suppliers are not liable for any consequential damage resulting from unintended use. No liability is assumed and no warranty claims can be submitted for damages caused by improper use.

3.4 Appliance Description

3.4.1 View of the crockery return belt system

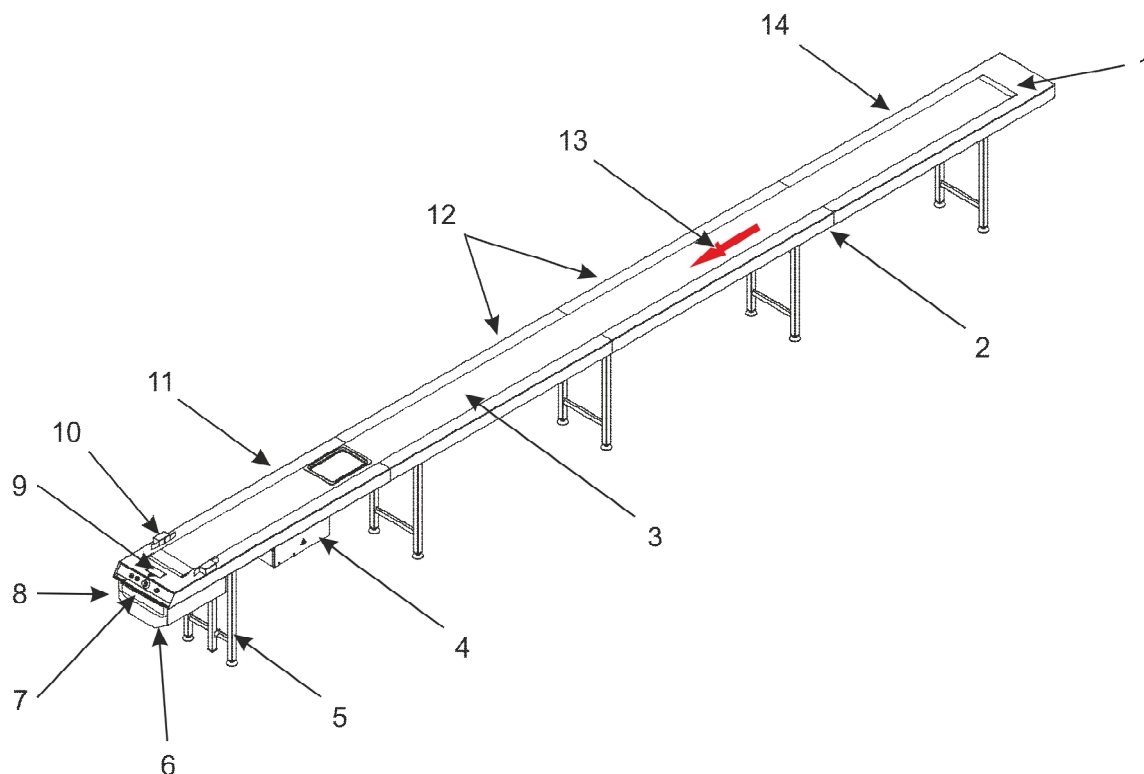


Figure 2 View of the appliance SGR

| | | | |
|----|------------------------------------|----|--------------------------------|
| 1 | Beginning of the belt | 2 | Connector with conveyor roller |
| 3 | Belt | 4 | Control |
| 5 | Belt system leg | 6 | Cleaning drawer with scraper |
| 7 | Control panel | 8 | End of the belt |
| 9 | Limit switch | 10 | Light barrier |
| 11 | Drive component with drive station | 12 | Intermediate part |
| 13 | Conveying direction | 14 | Deflection element |

3.4.2 View of the food distribution belt system

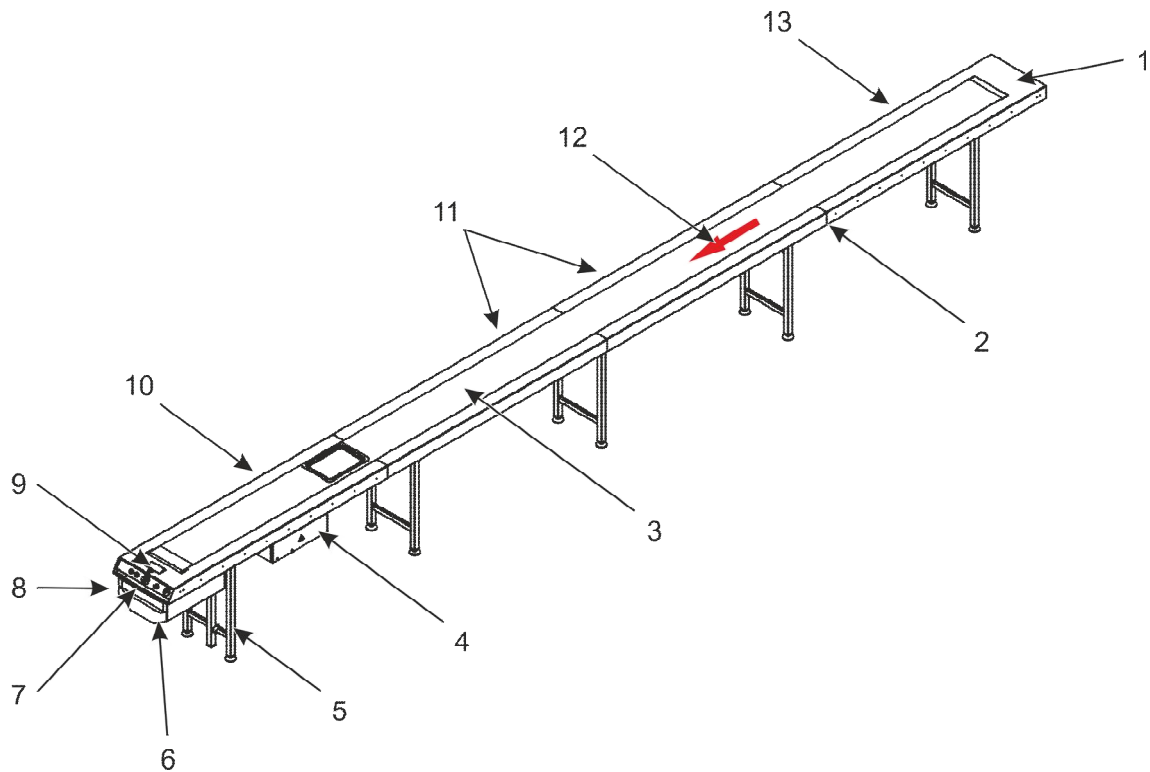


Figure 3 View of the appliance SPV

| | | | |
|----|-----------------------|----|------------------------------------|
| 1 | Beginning of the belt | 2 | Connector with conveyor roller |
| 3 | Belt | 4 | Control |
| 5 | Belt system leg | 6 | Cleaning drawer with scraper |
| 7 | Control panel | 8 | End of the belt |
| 9 | Limit switch | 10 | Drive component with drive station |
| 11 | Intermediate part | 12 | Conveying direction |
| 13 | Deflection element | | |

3.4.3 Standard Equipment

The standard design of the conveyor system includes a dirt scraper and a cleaning drawer that are fitted at the end of the belt underneath the controls.

The dirt scraper is necessary to clean the belt regularly. It is fitted in such a way that the distance between the belt and dirt scraper is sufficient to remove leftovers and impurities from the belt without damaging it. Leftovers and impurities wiped off by the scraper fall down into the cleaning drawer.

3.4.4 Equipment and Optional Accessories

You can install and fit the conveyor system with optional accessories in various ways:

- Types of installation (SGR and SPV):
The standing alone design of the conveyor system is mounted on stand feet. A combination of wall and base installation is possible.
A mobile design includes 2 swivel casters per belt system leg. All swivel casters consist of total locks for safety reason.
- Plastic shelves in the base (SGR and SPV)
The plastic shelves are designed as storage shelves in the base. The elements are placed on the long rails in the base of the conveyor system. The shelves are suitable for long-term use, even at maximum load (up to 10 kg/m) at temperatures between -30°C and +70°C.

- **End segment with limit rocker switch (SGR and SPV)**
The limit rocker switch is fitted in the end segment of the frame surface at the end of the belt. In case of mechanical strain the limit rocker switch will be pressed down, thus generating an electric signal, and the belt will stop moving. After releasing the limit rocker switch the belt will start moving automatically. The switch mechanism is protected on all sides against ingress of liquids and dirt particles.
- **Light barrier (SGR and SPV)**
The light barrier prevents the further movement of trays beyond the end of the belt; depending on the setting, with or without crockery items.
The light barrier is fitted on the end of the belt as a height restriction (crockery detector) inserted along with the reflector into covers made of stainless steel. They are fastened facing each other and flush on the bar of the edge of the well. Adjust the optic sensors after consultation; the minimum height is approx 0.2" (5 mm) below the edge, the maximum height is approx. 0.8" (20 mm) above the edge. Place the light barrier at the middle, about 13.8" (350 mm) from the end of the belt.
- **Foot switch (SPV only)**
The foot switch allows to start and stop the conveyor belt. It is used in addition to the operating elements on the control panel.
- **Patient card drawer (SPV only)**
The patient card drawer holds up patient cards and can be removed quickly and completely without any tools. It is fitted under the conveyor belt at the beginning of the belt system. The maximum load of 25 kg may not be exceeded.
- **Rotary table (SPV only)**
Use the rotary table that is fitted at the beginning of the belt at about 9.8" (250 mm) from the front side to keep your records or other information. The rotary table and the support tube rotate independently of each other. The rotary table may only be moved when there are no objects on its surface and there are no people around it. The maximum load of about 5 kg may not be exceeded. The rotary table is delivered disassembled. To assemble the rotary table, insert the support tube into the plastic part.
- **Hinged board (SPV only)**
The hinged board is an additional storing shelf and is fitted flush at the end of the belt. The board can be folded up by lifting it slightly up and raising it to an angle of 90°. It is not permitted to locate any objects on the board when folding it down. The maximum load of about 10 kg may not be exceeded in order not to risk any material damage.
- **Sorting bridges (SGR only)**
The sorting bridge is used for safe storage on the opposite belt casing. The sorting bridge can be folded by lifting it lightly up and raising it to an angle of 90°. The unfolded sorting bridge is flush with the belt casing. The hinged design without a chute but with a sound absorbing panel attached at the bottom can be fitted on the belt upon agreement. The maximum load of the sorting bridge is 25 kg.

3.5 Technical data

| SGR SPV | Value | Dimension | Note |
|--|---------------------------------|--|---|
| Structure length (min./max.) | 118.1 - 472.4 (3000 - 12000) | in (mm) | The structure length is variable. |
| Conveyor length (min./max.) | 100.4 - 454.7 (2550 - 11550) | in (mm) | The real structure length is calculated from the structure length minus 9.8" (250 mm) at the input area and 9.8" (250 mm) at the output area. |
| Width | 19.7 (500) | in (mm) | |
| Total height | 35.4 (900) | in (mm) | |
| Weight | approx. 44.1 (approx. 20) | lbs/ft (kg/m) | plus 187 lbs (85 kg) (control and drive) |
| Number of legs | 3 to 6 | Pc. | depending on the length of the conveyor system |
| Belt width | 11.8 (300) | in (mm) | |
| Motor power | 0.25 | kW | Bevel gear motor with frequency converter fitted outside (FUG) |
| Protection class of motor | IP 55 | | Thermal class F, protection against overheating by thermal contact switch |
| Speed range | 13 to 66 (4 to 20) | ft/min (m/min) | continuous adjustment |
| Switch box / Protection class Switch box | IP 65 | | Plastic switch cabinet, sizes: SPV cold distribution, SPV I, SPV II and SPV III depending on quantity of sockets and electrical variations |
| Electrical connection | 230/400 | V | AC, 3Ph NPE 50 Hz |
| Types of sockets | 230 230 400 400 | V Schuko V CEE V CEE 16 A V CEE 32A | Basic design without sockets |
| Power consumption (without sockets) | 0.28 | kW | The total power of the belt systems without sockets depends on the type and number of consumers. Basically, 3.6 kW per socket, but depending on the cross section and as a result protection of the supply line in connection with the load diversity factor. |
| Operating and ambient conditions | +41 to +131 (+5 to +55) | °F (°C) | |

You can find the corresponding certification marks on our homepage at www.hupfer.de.

3.6 Rating Plate

The rating plate of the conveyor system is fitted on the inner side of the door of the switch cabinet.

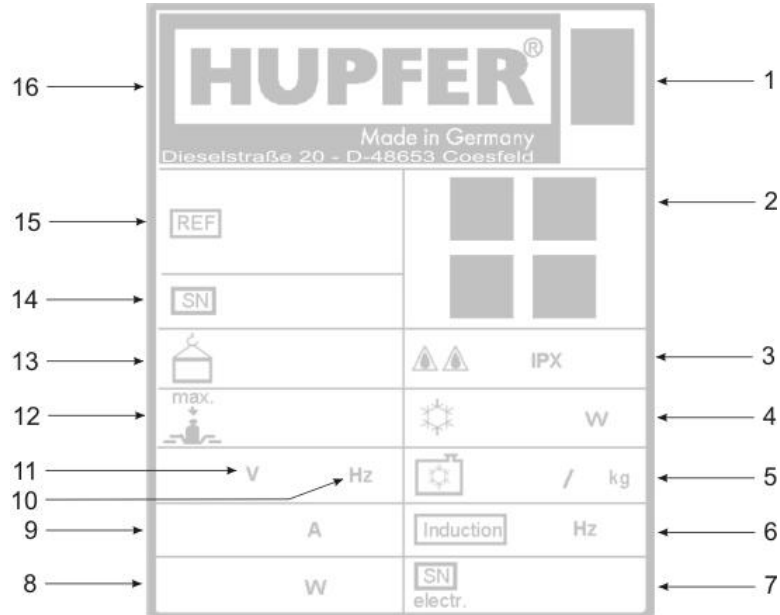


Figure 4 Rating plate

- | | | | |
|---|----------------------------|----|----------------------------|
| 1 | Disposal of old appliances | 9 | Nominal current |
| 2 | Certification mark | 10 | Frequency |
| 3 | Protection class | 11 | Nominal voltage |
| 4 | Refrigeration capacity | 12 | Payload |
| 5 | Refrigerant | 13 | Tare weight |
| 6 | Induction frequency | 14 | Serial number/Order number |
| 7 | Electrical serial number | 15 | Item and brief description |
| 8 | Electric power | 16 | Manufacturer |

4 Transport, Installation, Initial Operation and Taking out of Service

4.1 Transport

The delivered conveyor system with a length of up to 6 m is completely assembled, wired and set so that it is ready for operation.

Conveyor systems with a length of more than 6 m will be delivered segments that have to be assembled.

When loading, use only hoists and load lifting devices approved for appliances 1.5 times heavier than the conveyor system to be lifted. Only transport vehicles that are approved for the weight of the appliance may be used.

The scope of delivery is specified in the shipping documents in accordance with the valid purchase agreement and included with the delivery item.

4.2 Assembly

DANGER



Hazardous electrical voltage

Electrical current can pose a considerable threat to life and physical well-being and may lead to injuries.

Only an electrician or instructed staff under the guidance and supervision of an electrician may work on electrical systems or operational equipment; they must comply with the electrical industry rules while doing so.

DANGER



Defective emergency stop

In case of fault, e.g. from defective fuses, the drives may continue to run even after the emergency stop has been pressed.

CAUTION



Rotating machine parts

There is an indirect risk of injuries of the fingers caused by being pulled into the appliance and crushing.

Avoid any direct contact with the running conveyor belt and the outlet, feeding and deflection points during assembly or when performing any other work.

Never reach into the hazardous area of the conveyor system. Before switching on the conveyor system, make sure there is no risk of reactivation of the belt.

CAUTION



Injury to persons

The segments and the conveyor belt may only be assembled by two persons.



Wear protective goggles and safety gloves at all times when placing and joining the belt.

INFO

Conveyor systems longer than 6 m

The following section only applies to conveyor systems longer than 6 m which need not be delivered and mounted as a unit.

4.2.1 Assembly of segments

| | |
|---|---|
| CAUTION | Injury to persons and/or damage to property |
|  | There is a risk that parts of the conveyor system fall down during the assembly. This can result in injuries to persons and damage to property. Ask for help when assembling the segment and work at least in pair. |
| CAUTION | Damage to property |
|  | Do not place the segments onto the floor with the surface facing down, since they can get scratched or damaged. Use a suitable piece of material to place the segments. |
| INFO | Disposal of packing material |
| | The packing consists of recyclable materials and can be disposed of accordingly. The different materials should be separated and disposed of in an environmentally friendly manner. The local agencies responsible for disposal must be contacted regarding removal |


After the packaging material is removed, the conveyor system can be set up.

Conveyor systems with a length of more than 6 m will be delivered segments that have to be assembled.

Perform the following work steps when assembling the segments of the conveyor system:

- During assembly, please make sure that the floors are level and even and the conveyor system is level.
- The height of the conveyor system can be uniformly adjusted by means of the screw feet. Deviations are adjusted with a spirit level in the cross direction. Normally, the height is 35.43" (900 mm).
- When assembling begin with the end of the belt. For this purpose, place the first segment on the marked position.
- Screw the segment under the next part of the belt. To do so, the first person holds the segment while the second person pushes the next part of the belt onto the connector of the segment held by the first person.
- Assemble the segments in such a way that they are flush edge to edge. Ensure that the spacers are in the correct position (between the belt and the connecting plate with the larger bore hole facing the belt). Preload both plates with a hammer and a punch, then fasten all nuts with a maximum torque of 20 Nm.
- Continue with the assembly as described above until the last segment.
- Check again the inclination and align the conveyor system horizontally with the spirit level until it is level.

4.2.2 Pulling up the belt

| | |
|---|---|
| CAUTION | Damage to property |
|  | Overstretching the belt can lead to its destruction. Ensure that the belt is not overstretched. |
| NOTE | Arranging the belt |
| | Ensure that the smooth PVC surface is at the top when unrolling and arranging the belt while the rough surface is on the rollers. Do not twist the belt when arranging it. |

After the conveyor system has been assembled, pull up the belt.

Proceed as follows:

- Remove the packing material from the belt.
- Pull the belt (the chain is already connected) to the deflection wheel at the beginning of the conveyor system.
- Put the belt onto the conveyor rollers under the conveyor system and move along the drive roller until it will reach the limit rocker switch at the beginning of the belt.
- If the chain is not fastened, the belt can be moved over the drive rollers in reverse order. There is no mandatory order for laying the belt.
- Pull the belt over the upper side until the ends of the belt are facing each other at the middle of the conveyor belt.
- Join both ends of the belt together and fasten them with the plastic strips (connection elements). The plastic strips hold now the both ends of the belt together.
- Check the position of the belt and adjust it so that it lies exactly at the top of the conveyor system.

4.2.3 Stretching the belt


After the belt has been fastened, it needs to be stretched:

- Mark a distance of 1000 mm on the belt with a pencil (no pen).

| | |
|-------------|--|
| NOTE | Length of the belt |
| | A length of a perfectly stretched belt is from 39.57 to 39.65" (1,005 to 1,007 mm) at a strain from 0.5 to 0.7% (pay attention to the marks made with the pencil). |

- The belt can be adjusted appropriately by turning both tensioning nuts on the threaded rods at the deflection.
- The belt must be stretched in such a way that the distance between both ends of the belt is not more than 0.08" (2 mm).
- Trim any plastic strips protruding from the sides to the width of the belt using robust scissors after stretching the belt.
- Finally, scorch and seal these both places with a small flame (e.g., with a lighter), so that the plastic strips cannot slip out any more.

4.2.4 Adjusting the belt

| | |
|---|---|
| CAUTION | Rotating machine parts |
|  | <p>Avoid any direct contact with the running conveyor belt and the outlet, feeding and deflection points during assembly or when performing any other work. There is an indirect risk of injuries of the fingers caused by being pulled into the appliance and crushing.</p> <p>Never reach into the hazardous area of the conveyor system. Before switching on the conveyor system, make sure there is no risk of reactivation of the belt.</p> <p>Never catch the running belt and never wear loose clothes while aligning or adjusting the drive drum.</p> |

| | |
|-------------|--|
| NOTE | Adjusting the belt |
| | <p>To adjust the belt, it must be monitored by two persons and switched off immediately, if required, e.g. when the belt leaves the area around the drive drum and rubs at the top of the conveyor belt.</p> |

The conveyor system must be connected to the mains to align and adjust the belt.

To align and adjust the belt, proceed as follows:

- Switch on the conveyor system and allow the belt to start slowly and carefully running (at most the level three).
- Adjust the movement of the belt by turning the tensioning nuts on the threaded rods at the deflection. Turn the tensioning nuts only slightly during adjusting. A ¼ of a turn is usually enough.
- The belt moves always to the side of the smallest clearance of the axles. It is the side where the drive drum and the deflection wheel are closer together.

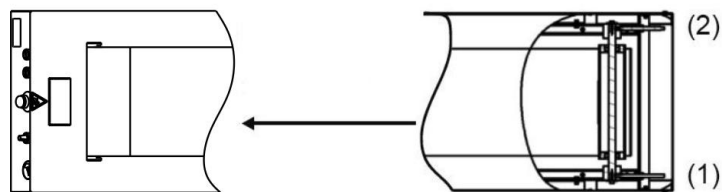



Figure 5 The belt runs obliquely

If the belt runs to the right, the right side (2) needs to be stretched or to the left side needs to be released (1).

If the belt runs to the left, the left side (1) needs to be stretched or the right side (2) needs to be released.

| | |
|---|---|
| DANGER | Hazardous electrical voltage |
|  | <p>Electrical current can pose a considerable threat to life and physical well-being and may lead to injuries.</p> <p>Only an electrician or instructed staff under the guidance and supervision of an electrician may work on electrical systems or operational equipment; they must comply with the electrical industry rules while doing so.</p> <p>Switch off the conveyor system and secure it against unintended reactivation after the belt has been adjusted.</p> |

- After the belt has been taken out of operation, the limit boxes and other removed parts can be fitted back. Screw and fasten the counter nuts on the threaded rods.
- Switch on the conveyor system and allow the belt to start slowly and carefully running.
- Pay attention to the proper run of the belt and unusual noises. The belt must not drag along the top of the belt system, the limit boxes or other parts.

Once all adjustments have been completed, the conveyor system can be put into operation. There should be no loads on the system while putting it into operation. This is the only way to detect causes of initial start-up difficulties.

4.3 Commissioning

DANGER



Hazardous electrical voltage

Electrical current can pose a considerable threat to life and physical well-being and may lead to injuries.

Only an electrician or instructed staff under the guidance and supervision of an electrician may work on electrical systems or operational equipment; they must comply with the electrical industry rules while doing so.

Before starting work, disconnect live parts from power. Involve a second person to activate the emergency stop in case of emergency.

Check the premises before setting up the conveyor system. Flaws can be detected and improved at an early stage. Observe the following points before setting up the conveyor system:

- The floors in the premises where the appliance is to be set up must be level and correspond to the required load-bearing capacity of 0.03 psi [196 N/m²] (4.1 lbs/ft² [20 kg/m²]).
- We do not recommend attaching the conveyor system to the floor of the premises with plugs because of the moisture barrier layer that exists in the most cases.
- Electrical connections for the conveyor system must be in place as agreed.

The user of the conveyor system must take other measures beforehand to ensure the safety of the operating staff:

- Specify the field of application and draw up corresponding safety instructions.
- Instruct the operating staff in safety.
- Give the operating staff training.
- Mark hazardous areas.

4.3.1 Connecting the conveyor system

The following points are to be observed when connecting the conveyor system:

- Let the power supply be installed properly and ground the conveyor system.
- Protect power supply cables of the conveyor system against exposure to moisture.
- In case of unintended reactivation, stop the appliance by using the control system.

In some countries, the technical specifications of the power mains may deviate from those provided in these operating instructions. Thus, the connecting data of the conveyor system should be harmonized with the data of the local power mains. Compare the specification given in the rating plate with the local electrical specifications.

To connect the conveyor system, proceed as follows:

- Connect the connecting cable with the distributor of the conveyor system.
- Connect the three-phase motor in such a way that it rotates in a specified direction.

| Electrical connections SPV/SGR | | | | | |
|---------------------------------------|-----------------------|-----------------------|-----------------------|------------------------|------------------------|
| Control system and power distribution | SGR | SPV cold | SPV-I | SPV-II | SPV-III |
| Number of 230 V sockets | - | 0 | 8 | 12 | 18 |
| Electrical supply | 230V~, N/PE | 230V~, N/PE | 400V 3~, N/PE | 400V 3~, N/PE | 400V 3~, N/PE |
| Cable cross section Q | 3x2.5 mm ² | 3x2.5 mm ² | 5x6.0 mm ² | 5x10.0 mm ² | 5x16.0 mm ² |

The cable cross sections given above are a recommendation of HUPFER®. Dimensions of cross sections depending on the length and consumption can vary considerably.

4.3.2 Measures for Putting the Appliance into Operation

There should be no loads on the system while putting it into operation.

Check the following while putting the conveyor system into operation to ensure the safety:

- Pay attention to unusual noises.
- Check whether the belt runs properly (readjust the belt, if necessary).
- Conveyor system, light barrier and limit switch must be free of foreign objects.
- Unlock the Emergency stop button.
- Set the potentiometer.

The conveyor system may be put into operation once its correct functioning has been ensured.

4.4 Decommissioning, Storage and Recycling

Proceed as follows to take the conveyor system out of operation:

- Take the conveyor system out of operation and secure it against unauthorised reactivation.
- Switch off the conveyor system and the motor at the mains.

The conveyor system must be kept in a dry, frost-free environment when placed in temporary storage. The conveyor system must be kept covered with a suitable covering material to be protected against dust ingress.

The appliance kept in the storage location must be checked for damage and corrosion every 6 months.

| NOTE | Condensation |
|------|--|
| | Ensure that there is sufficient ventilation and no major variations in temperature in the storage location to prevent condensation from forming. |

Before the appliance is taken back into operation, it must be clean and dry.


To dismantle the conveyor system, proceed as follows:

- Remove the belt.
- Dismantle the control and operating controls.
- Dismantle the conveyor system starting with the first segment at the beginning of the belt system.
- Dismantle all segments up to the end of the belt system.
- Clean the machine parts to remove used lubricants.
- Remove all seals from the bearings.
- Separate all the plastic, electronics and metal parts from each other.

If the conveyor system needs to be recycled, all the operating and auxiliary materials must be disposed in an environmentally compatible manner. Recyclable materials must be properly separated and disposed of in an environmentally compatible manner in accordance with local Waste Disposal Regulations. The local agencies responsible for disposal must be contacted regarding removal. Separate the reusable materials of the appliance (casters and plastic parts) before disposing of or send the appliance to a recycling centre. Dispose of the electronics at corresponding collection centres.

We offer our customers to dispose of their waste appliances. Please contact us or one of our distribution partners.

Packaging and packing material can be sent to the recycling centre by indicating the waste disposal contract number. If you do not have the valid waste disposal contract number, you can request it from **HUPFER®** - Service.

| NOTE | Disposal of electrical equipment |
|---|---|
|  | <p>Electrical equipment is not a part of household refuse. Please return the machine to the manufacturer for disposal purposes: HUPFER® Metallwerke GmbH & Co. KG Dieselstrasse 20 48653 Coesfeld ☎ +49 2541 805-0 📠 +49 2541 805-111 www.hupfer.de info@hupfer.de</p> |

5 Operation

DANGER

Defective emergency stop



In case of fault, e.g. from defective fuses, the drives may continue to run even after the emergency stop has been pressed.

CAUTION

Rotating machine parts



Avoid any direct contact with the running conveyor belt and the outlet, feeding and deflection points during operation or when performing any other work. There is an indirect risk of injuries of the fingers caused by being pulled into the appliance and crushing.

Never reach into the hazardous area of the conveyor system during operation. Before switching on the conveyor system, make sure there is no risk of reactivation of the belt.

5.1 Arrangement and Function of the Controls

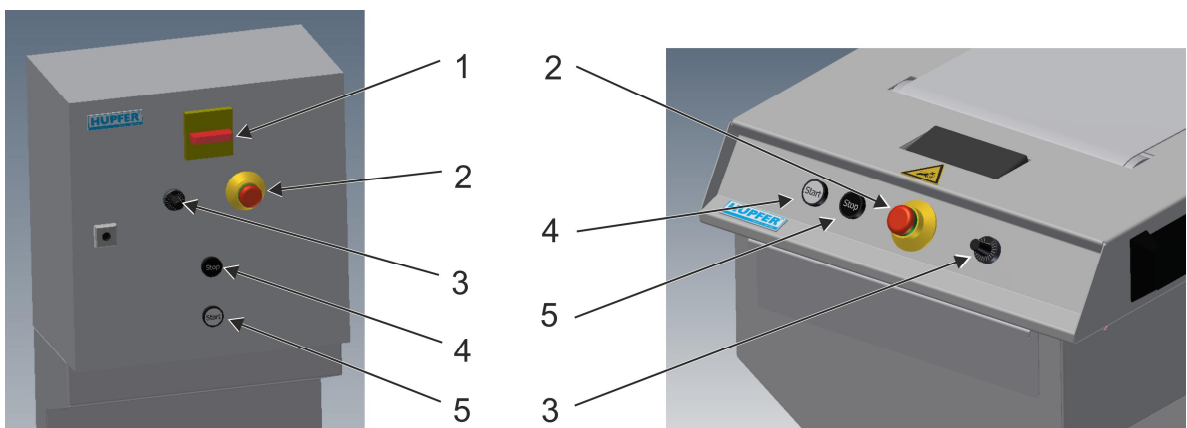


Figure 6 Controls

- | | |
|--|---|
| <ul style="list-style-type: none"> 1 Main switch (SGR only) 2 Emergency Stop button 3 Potentiometer | <ul style="list-style-type: none"> 4 Stop button 5 Start button |
|--|---|

| Position number | Control | Function |
|-----------------|------------------------|---|
| 1 | Main switch (SGR only) | Switches the conveyor system on. |
| 2 | Emergency Stop button | Is used to switch off the appliance quickly in case of emergency. If you have pressed the Emergency Stop button, the power supply of the drives of the whole conveyor system will be interrupted. |
| 3 | Potentiometer | Controls the speed of the belt: V min. = 13 ft/min. (4 m/min.) V max. = 66 ft/min. (20 m/min.) |
| 4 | Stop button | Stops the conveyor system if needed. |
| 5 | Start button | Starts the conveyor system. |

5.2 Operation

CAUTION

Rotating machine parts



Avoid any direct contact with the running conveyor belt and the outlet, feeding and deflection points during operation or when performing any other work. There is an indirect risk of injuries of the fingers caused by being pulled into the appliance and crushing.

Never reach into the hazardous area of the conveyor system during operation. Before switching on the conveyor system, make sure there is no risk of reactivation of the belt.

Ensure that your fingers do not get caught under the belt when performing work at the conveyor system.

Do not wear any loose-fitting clothing, such as scarves or ties, during operations.

Place the trays on the belt uniformly to ensure a smooth transport.

The conveyor system keeps on running automatically. If necessary, you can manually intervene in the conveying process via the operating console.

Switching on:

- Set the main switch (1) on the SGR from the switch position 0 to the switch position 1. The system is switched on and ready for operation.
- Set the belt speed on the potentiometer (4) to the value 1-2.
- Press the green start button (3) or the foot switch (option) to start the conveyor system.

Switching off / stop:

- The belt of the conveyor system will automatically stop moving if the light barrier has been interrupted.
- Press the red stop button (2) or the foot switch (option) to stop the conveyor system, if required.
- Set the main switch (1) on the SGR from the switch position 1 to the switch position 0. As a result, the conveyor system will switch off.

5.3 Measures at the End of Use

CAUTION

Rotating machine parts



Avoid any direct contact with the running conveyor belt and the outlet, feeding and deflection points during operation or when performing any other work. There is an indirect risk of injuries of the fingers caused by being pulled into the appliance and crushing.

Never reach into the hazardous area of the conveyor system during operation.



Wait until the belt comes to a standstill.

To take the conveying device out of operation, proceed as follows:

- Make sure that no more trays are placed onto the conveying device and that the conveyor belt is cleared up.
- Switch off the conveyor system on the control panel.
- Disconnect the conveyor system from the mains with the main switch.

6 Troubleshooting and Repair

6.1 Safety Measures

| | |
|---|--|
| DANGER | Hazardous electrical voltage |
|  | <p>Electrical current can pose a considerable threat to life and physical well-being and may lead to injuries.</p> <p>Before performing troubleshooting, take the conveyor system out of operation and secure it against unauthorised reactivation.</p> |
| CAUTION | Rotating machine parts |
|  | <p>There is an indirect risk of injuries of the fingers caused by being pulled into the appliance and crushing.</p> <p>Never reach into the hazardous area of the conveyor system while examining the system for faults and performing troubleshooting. Ensure that your fingers do not get caught under the belt when performing work at the conveyor system.</p> |

6.2 Instructions regarding Fault Repair

Servicing may be carried out by authorised specialists only.

Defective components may only be replaced with HUPFER® original parts. The modular design simplifies the replacement of individual components.

In the event of after-sales service and when ordering spare parts specify always the data given in the rating plate.

Regular inspections and maintenance of the appliance prevent disruptions to operation and ensure safety.

6.3 Fault and Action Table

Only a specialist staff authorised by HUPFER® may perform troubleshooting work.

| Fault | Cause | Measures |
|----------------------------------|--|--|
| The conveyor system does not run | Defective on site fuses | Fuses to be checked and replaced by a qualified electrician, if required |
| | Defective mains connecting cable or mains plug | Have the disruption checked and repaired by a qualified electrician. |
| | Defective switch device | Have the disruption checked and repaired by a qualified electrician. |
| | Emergency Stop button has been pressed (the green ring cannot be seen) | Unlock the Emergency Stop button (the green ring is visible) |
| | Main switch is not turned on | Turn on the main switch |
| | Defective fine fuses | Fault to be checked and repaired by a qualified electrician |
| | Energy optimisation device switches on | Fault to be checked and repaired by a qualified electrician |
| | Foot switch is not activated | Press the foot switch |
| The speed cannot be adjusted | Defective potentiometer or control unit | Fault to be checked and repaired by a qualified electrician |

| Fault | Cause | Measures |
|--|--|--|
| Motor does not run | Fuse is blown | Fuses to be checked and replaced by a qualified electrician, if required |
| | Overload protection has been triggered | Switch on the overload protection and if needed let the fault be checked and repaired by a qualified electrician |
| | Defective motor control unit (frequency converter) | The control unit may not to be checked and replaced by a qualified electrician. |
| | Defective motor | The motor may need to be checked and replaced by a qualified electrician. |
| The conveyor system does not convey | The conveyor belt is overloaded, the drive spins around | Take some loads off the conveyor belt and check and restretch the belt, if necessary |
| The conveyor system conveys too quickly | Frequency converter setting is too high | Change potentiometer settings |
| The conveyor systems does not switch off | Defective relay | Fault to be checked and repaired by a qualified electrician |
| | Defective light barrier | Fault to be checked and repaired by a qualified electrician |
| | Defective button | Fault to be checked and repaired by a qualified electrician |
| | Defective control system | Fault to be checked and repaired by a qualified electrician |
| Running noises | There is either too much free space for the belt or the belt is stretched too much | Check and if needed adjust the tension |
| | Defective bearings in the casters | Fault to be checked and repaired by a qualified electrician |
| | Dirty surface | clean |
| Conveyor belt run, one-sided | The belt is stretched on one side | Check and adjust the tension |
| | Impurities between the belt and driving roller and/or deflection pulley | Clean and readjust the driving roller and/or deflection pulley |
| The belt runs obliquely | The tension is too low | Check and adjust the tension |

7 Care and Maintenance

7.1 Safety Measures

DANGER

Hazardous electrical voltage



Electrical current can pose a considerable threat to life and physical well-being and may lead to injuries.

Before performing cleaning and maintenance work, take the conveyor system out of operation and secure it against unauthorised reactivation.

CAUTION

Rotating machine parts



There is a risk of injury caused by being pulled into the appliance and crushing.

Before performing cleaning and maintenance work, take the conveyor system out of operation and secure it against unauthorised reactivation. Avoid direct contact with the running belt and the outlet, feeding and deflection points.

Never reach into the hazardous area of the conveyor system.

CAUTION

Risk of damages to property



Due to defective maintenance there is a risk of injury and equipment damage.

Meet the maintenance intervals and the specified deadlines for regular checks and inspections.

7.2 Hygiene Measures

It is essential for operating staff to act in the correct manner to ensure optimal hygiene.

Everyone must be informed about local applicable hygiene regulations, observe them and comply with them.

Use a waterproof plaster to cover wounds on hands and arms.

Never sneeze or cough on clean trays or crockery items.

7.3 Notes on Care and Maintenance Measures

CAUTION

Appliance damage



Never use chloride-containing cleaning agents, abrasive cleaning powder or steel wool to clean the controls. Aggressive cleaning agents can destroy plastics and scratch the display.

Use lukewarm water and a soft cloth to clean the control panel.

Never clean the running conveyor system.

Do not clean the conveyor system with steam-jet or high-pressure cleaners.

Take the conveyor system out of operation and switch it off at the mains in any area where steam-jet or high-pressure cleaners are to be used.

Dry well the conveyor system after the wet and moist cleaning to avoid the development of mould and growth of germs and bacteria.

Let the belt dry well after cleaning.

The use of degreasing, chlorine-free agents (e.g. soapy water used normally in kitchens) and cleaning cloth is sufficient for cleaning. PVC surfaces are never to be cleaned with solvents and aggressive substances.

7.3.1 Table of care measures

| Care and inspection measures | Action | daily | weekly | monthly | Interval |
|---|--------|-------|--------|---------|----------|
| Top and bottom of the belt | clean | x | | | |
| Surface of the conveyor system | clean | x | | | |
| Cleaning drawer and scraper | clean | x | | | |
| Impurities between casters and the belt | remove | | | x | |

7.3.2 Maintenance table

To ensure a long-lasting lifetime of the conveyor system, the regular maintenance is required. Appeared faults or damages should be eliminated immediately.

| Maintenance measures | Action | daily | weekly | monthly | Interval |
|---|-----------|-------|--------|---------|----------------|
| Visual inspection of the conveyor system for mechanical damages | carry out | | x | | |
| Belt between the casters and the belt for impurities | check | | x | | |
| Visual inspection of the electrical installation | carry out | | | | x ¹ |
| Connecting cable and mains plug for mechanical damages | check | | | | x ¹ |
| Protective earth conductor | check | | | | x ¹ |
| Function of the main switch | check | | | x | |
| Function of the Emergency Stop button | check | | | x | |
| Engine box and deflection box | clean | | | x | |
| Function of the mechanical parts | check | | | x | |
| Belt for damages and wear | check | | | x | |
| Belt tension | check | | | x | |
| Bearing of the drive and deflection side | check | | | x | |
| Function of the limit switch | check | | | x | |
| Function of the conveyor rollers | check | | | x | |
| Chain tension | check | | | x | |
| Chain | Lubricate | | | x | |

x¹ = every 6 months

7.4 Special Care Instructions

Resistance to corrosion in stainless steel is provided by a passive layer which is formed on the surface when oxygen is absorbed. The oxygen in the air is sufficient for the formation of the passive layer inasmuch as faults or damage to the passive layer can be remedied again automatically by mechanical action.

The passive layer develops or is renewed more quickly when the steel comes into contact with water containing oxygen. The passive layer can be chemically damaged or breached by agents which have a reducing (oxygen-consuming) effect when they come into contact with steel at concentrated levels or at high temperatures.

Such aggressive substances include:

- Substances containing salt and sulphur
- Chlorides (salts)
- Seasoning concentrates (e.g. mustard, vinegar essence, seasoning cubes, saline solutions)

Further damages can occur due to:

- Extraneous rust (e.g. from other components, tools or rust film)
- Iron particles (e.g. grinding dust)
- Contact with non-ferrous metals (element formation)
- Lack of oxygen (e.g. no admission of air, low-oxygen water).

General working principles for handling appliances made of "refined stainless steel":

- Always keep the surface of appliances made from stainless steel clean and open to air.
- Use cleaning agents suitable for stainless steel. Never use bleaching cleaning agents or any containing chlorides.
- Remove layers of lime scale, grease, starch and egg-white by cleaning daily. Corrosion may occur underneath these layers due to lack of air absorption.
- Once the appliance has been cleaned, remove all cleaning agent residues by wiping thoroughly with plenty of water. The surface should be thoroughly dried after wiping.
- Do not bring items made of stainless steel into contact with substances such as concentrated acids, seasonings and salts for longer than is absolutely necessary. Acid fumes emitted when tiles are cleaned also cause corrosion in "refined stainless steel".
- Avoid damaging the surface of the stainless steel, especially by bringing into contact with metals other than stainless steel.
- Residues from other metals produce extremely small amounts of chemical elements which can cause corrosion. Contact with iron and steel must be avoided at all costs, because it will cause extraneous rust. If stainless steel comes into contact with iron (steel wool, steel particles from pipes, water containing iron), this can trigger corrosion. Therefore, only use refined steel wool or brushes with natural, plastics or refined steel bristles only for physical cleaning. Steel wool or brushes with unalloyed steel cause extraneous rust due to abrasion.

8 Spare Parts and Accessories

8.1 Introduction

Servicing should be carried out by authorised specialists only.

Defective components should only be replaced with **HUPFER®** original parts or identical spare parts. That is the only way to guarantee a safe operation. We would like to point out that a perfect functionality of the appliance can only be ensured if you use recommended original parts by **HUPFER®**. Unsuitable or partially suitable spare parts can void the warranty.

Spare parts and accessories can be ordered at **HUPFER®** Service (Tel. +49 2541 805-0). When ordering spare parts or after-sales services, always specify the order number and specifications on the rating plate. Please specify the required belt length when ordering spare parts.

8.2 Spare Parts and Accessories List

| Drawing number | Item designation | Type | |
|--------------------|---------------------|-------------------------------|------------------------------------|
| 21.89 (0191093370) | Button | Emergency stop 1S 1Ö complete | |
| 0116300656 | Button | "Start" 51/41/30 grey | Polymer |
| 21.89 (0116300657) | Button | "Stop" 51/41/30 grey | Polymer |
| 21.89 (0191028022) | Potentiometer | 77/41/30 complete | |
| 21.89 (015220511) | Frequency converter | 240V 0.25kW | |
| 0191163394 | Sensor | Reed magnetic 1Ö | |
| 21.89 (0191008557) | Light barrier | E3S-AR 31 | |
| 0116300658 | foot switch | PA66 72/97/28 12 - 230V black | |
| 21.89 (0191100340) | Floor fastening | Stainless steel 105/75/52 cpl | Stainless steel |
| 0191128732 | Holder | 38/18/10 black | Polymer |
| 21.89 (0191042205) | Magnet | Ø15/5 adhesive force 90N | |
| 21.89 (0191086628) | Drive drum | Ø76/320/440/Ø20 | Stainless steel |
| 0191086625 | Deflection drum | Ø76/320/440 | Stainless steel |
| 014002525 | Threaded leg | PA Ø70/170 40x40 black set | (Package contents: 2 piece) |
| 21.89 (0191029491) | Gear motor | 230/400V 50Hz 0.25KW | |
| 21.89 (0116301163) | Shaft | Ø18/150 | Stainless steel |
| 0191030248 | Sprocket wheel | C45 3/8" x 7/32" Z 19 | |
| 21.89 (0191075894) | Drive chain | Belt 505 mm long, complete | |
| 21.89 (015223024) | Double link | cropped 3/8" C-06B-1 | (Package contents: 1 unit 5223024) |
| 21.89 (015223023) | Connecting link | 3/8" x 7/32" | (Package contents: 1 unit 5223023) |
| 21.89 (0116300554) | Lower belt roller | 431/50/28 | |
| 0116301248 | Belt | | Variable length |

9 Annex

9.1 Monthly Maintenance Checklist

| Conveyor belt systems (Belt) | | Function | Cleanness | Condition/ wear | Replace part | Date and maintenance |
|---------------------------------|--|----------|-----------|-----------------|--------------|----------------------|
| 1 | Check the function of the main switch | | | | | |
| 2 | Check the function of the Emergency Stop button | | | | | |
| 3 | Clean the engine box and deflection box | | | | | |
| 4 | Check the function of the mechanical parts | | | | | |
| 5 | Check the belt for damages and wear | | | | | |
| 6 | Check the belt tension | | | | | |
| 7 | Check the bearing of the drive and deflection side | | | | | |
| 8 | Check the function of the limit switch | | | | | |
| 9 | Check the function of the conveyor rollers | | | | | |
| 10 | Check the chain tension | | | | | |
| 11 | Lubricate the chain | | | | | |

9.3 EC Declaration of Conformity

CE Konformitätserklärung

Declaration of CE-Conformity | Déclaration de conformité CE



Gegenstand | Object | Objet

Geschirr-Rücklaufband | crockery return belt | Bande de retour de la vaisselle

Artikelgruppe | Article category | Groupe d'articles

SGR

Typ | Type | Type

Ohne Heizung/Kühlung | without heating/cooling | sans chauffage/refroidissement

Es wird bescheinigt, dass das/die zuvor näher beschriebene/n Produkt/e der/den im Folgenden aufgelisteten EU-Richtlinie/n entspricht/entsprechen:

98/37/EG, 2006/95/EWG, 2004/108/EG

Darüber hinaus wurden folgende harmonisierte Normen angewandt:

EN ISO 14121-1, EN ISO 12100-1, EN ISO 12100-2, EN 614-1, EN 1037, EN 349, EN ISO 13857, EN 60204-1, EN 61140, EN 61000-6-2, EN 61000-6-4

Im Übrigen wird bescheinigt, dass das/die Produkt/e weder Störungsquellen noch störungsanfällige Bauteile im Sinne der EMV-Richtlinie enthält/enthalten.

It is certified that the product/s described in detail before, conform/s to the requirements of the European Union directive/s listed in the following:

98/37/EC, 2006/95/EWG, 2004/108/EC

Furthermore, the following harmonised standards have been applied:

EN ISO 14121-1, EN ISO 12100-1, EN ISO 12100-2, EN 614-1, EN 1037, EN 349, EN ISO 13857, EN 60204-1, EN 61140, EN 61000-6-2, EN 61000-6-4

Incidentally, it is certified that the product/s contain/s neither sources of disturbance nor components liable to disturbances according to the EMC directive.

Il est certifié que le/s produit/s décrit/s en détail ci-dessus, correspond/ent aux directive/s de l'UE énuméré/es dans ce qui suit:

98/37/CE, 2006/95/EWG, 2004/108/CE

En outre, les normes harmonisées suivantes ont été appliquées:

EN ISO 14121-1, EN ISO 12100-1, EN ISO 12100-2, EN 614-1, EN 1037, EN 349, EN ISO 13857, EN 60204-1, EN 61140, EN 61000-6-2, EN 61000-6-4

Il est certifié aussi, que le/s produit/s ne contient/contiennent ni des sources de perturbation ni des éléments de construction exposés à des perturbations correspondant aux directives de l'AECM.

Coesfeld, 09.08.2010

Helmut Schumacher
Vorname, Nachname

Geschäftsführung
Position

Unterschrift

Jürgen Gottwald
Vorname, Nachname

Leiter Normenstelle
Position

Unterschrift

Dokumentationsbevollmächtigter
Jürgen Gottwald

HUPFER® Metallwerke
GmbH & Co. KG

info@hupfer.de

Diese Konformitätserklärung ist eine original Konformitätserklärung in deutscher Sprache und kann gleichlautende Übersetzungen in weiteren EU-Sprachen enthalten. This declaration of conformity is an original declaration of conformity in the German language and can contain identical translations in the other EU languages. Cette déclaration de conformité est une déclaration de conformité originale en langue allemande et peut contenir des traductions conformes en d'autres langues de l'UE.

HUPFER® Metallwerke GmbH & Co KG

Dieselstraße 20 | 48653 Coesfeld | Deutschland | +49 2541 805-0 | info@hupfer.de



CE Konformitätserklärung

Declaration of CE-Conformity | Déclaration de conformité CE

Gegenstand | Object | Objet

Speisenverteilband | food distribution belt | Tapis de distribution des repas

Artikelgruppe | Article category | Groupe d'articles

SPV

Typ | Type | Type

Ohne Heizung/Kühlung | without heating/cooling | sans chauffage/refroidissement

Es wird bescheinigt, dass das/die zuvor näher beschriebene/n Produkt/e der/den im Folgenden aufgelisteten EU-Richtlinie/n entspricht/entsprechen:

2006/42/EG, 2006/95/EWG, 2004/108/EG

Darüber hinaus wurden folgende harmonisierte Normen angewandt:

EN ISO 14121-1, EN ISO 12100-1, EN ISO 12100-2, EN 614-1, EN 1037, EN 349, EN ISO 13857, EN 60204-1, EN 61140, EN 61000-6-2, EN 61000-6-4

Im Übrigen wird bescheinigt, dass das/die Produkt/e weder Störungsquellen noch störungsanfällige Bauteile im Sinne der EMV-Richtlinie enthält/enthalten.

It is certified that the product/s described in detail before, conform/s to the requirements of the European Union directive/s listed in the following:

2006/42/EG, 2006/95/EWG, 2004/108/EC

Furthermore, the following harmonised standards have been applied:

EN ISO 14121-1, EN ISO 12100-1, EN ISO 12100-2, EN 614-1, EN 1037, EN 349, EN ISO 13857, EN 60204-1, EN 61140, EN 61000-6-2, EN 61000-6-4

Incidentally, it is certified that the product/s contain/s neither sources of disturbance nor components liable to disturbances according to the EMC directive.

Il est certifié que le/s produit/s décrit/s en détail ci-dessus, correspond/ent aux directive/s de l'UE énuméré/es dans ce qui suit:

2006/42/CE, 2006/95/EWG, 2004/108/CE

En outre, les normes harmonisées suivantes ont été appliquées:

EN ISO 14121-1, EN ISO 12100-1, EN ISO 12100-2, EN 614-1, EN 1037, EN 349, EN ISO 13857, EN 60204-1, EN 61140, EN 61000-6-2, EN 61000-6-4

Il est certifié aussi, que le/s produit/s ne contient/contiennent ni des sources de perturbation ni des éléments de construction exposés à des perturbations correspondant aux directives de l'AECM.

Coesfeld, 09.08.2010

Helmut Schumacher
Vorname, Nachname

Geschäftsführung
Position

Unterschrift

Jürgen Gottwald
Vorname, Nachname

Leiter Normenstelle
Position

Unterschrift

Dokumentationsbevollmächtigter
Jürgen Gottwald

HUPFER® Metallwerke
GmbH & Co. KG

info@hupfer.de

Diese Konformitätserklärung ist eine original Konformitätserklärung in deutscher Sprache und kann gleichlautende Übersetzungen in weiteren EU-Sprachen enthalten. This declaration of conformity is an original declaration of conformity in the German language and can contain identical translations in the other EU languages. Cette déclaration de conformité est une déclaration de conformité originale en langue allemande et peut contenir des traductions conformes en d'autres langues de l'UE.

HUPFER® Metallwerke GmbH & Co KG

Dieselstraße 20 | 48653 Coesfeld | Deutschland | +49 2541 805-0 | info@hupfer.de

